



REVISIONS					
LTR	ECO	DESCRIPTION	DATE	APPROVED	ZONE
A		INITIAL_RELEASE	4/14/2016	RWW	



NOTES:  
XXXXX

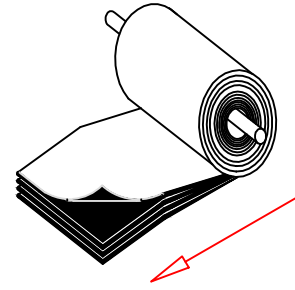



THESE INSTRUCTIONS  
ARE FOR UNROLLING FROM  
THE BOTTOM OF THE ROLL

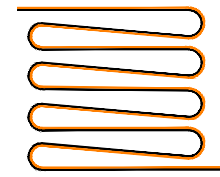

PIECE 1

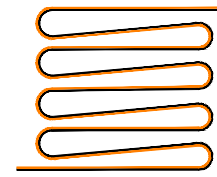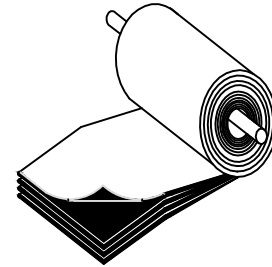

PIECE 2

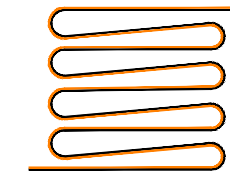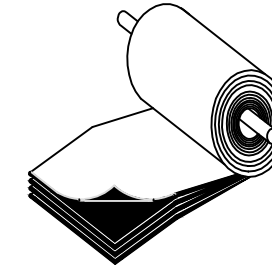


PIECE 3

← UNFOLD

UNFOLD →


UNFOLD →

BUNKER STARTING END

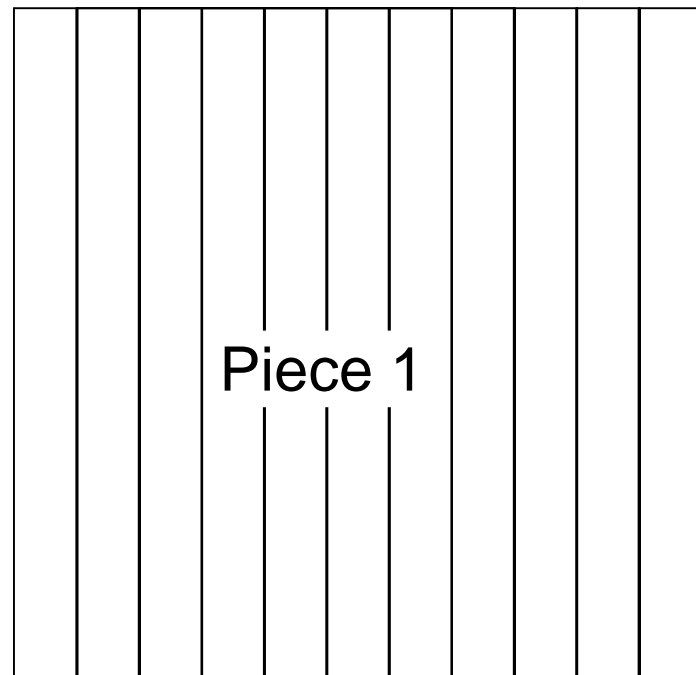

Piece 1

PULL PIECE 1 FROM ROLL

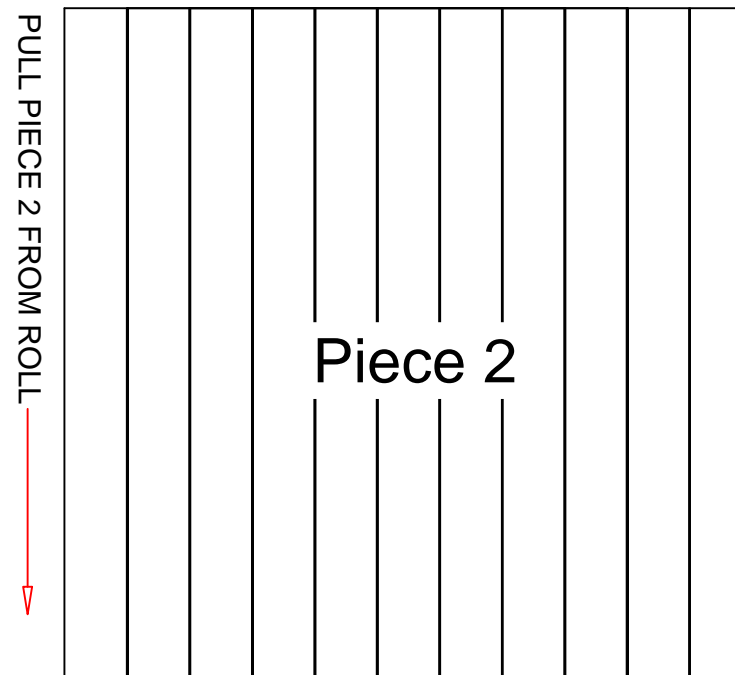

Piece 2

PULL PIECE 2 FROM ROLL



Piece 3

PULL PIECE 3 FROM ROLL

CONTINUED ON NEXT PAGE


DEPLOYMENT INSTRUCTIONS;

1. PULL PIECE 1 & 2 ACROSS THE GRAIN PILE ABOUT 1/6 OF THE WAY FROM THE STARTING END
  2. SEW PANELS AS SHOWN ON THE SEWING INSTRUCTIONS, (PAGE 2 AND 3)
  3. WHILE HOLDING PIECE 2, UNFOLD PIECE 1 TO THE STARING END OF THE BUNKER
  4. UNFOLD PIECE 2
  5. UNROLL PIECE 3
  6. SEW PIECE 3 TO PIECE 2 AS SHOWN ON THE SEWING INSTRUCTIONS, (PAGE 3 AND 4)
  7. UNFOLD PIECE 3
- FOR FURTHER INSTRUCTIONS VISIT [raveneffd.com/installation](http://raveneffd.com/installation)


		COVER TYPE			
		OVAL 6 PIECE Accordion Fold No Options Page 1 of 4			
RAVEN ENGINEERED FILMS PO BOX 5107 SIOUX FALLS, SD 57117-5107 +1 (800) 635-3456		SIZE	SALES ORDER	DRAWING NUMBER	REV
DRAWN	RWW	1/18/2016	B	1	O6NOAS-1 A
DO NOT SCALE DRAWING		PROPRIETARY AND CONFIDENTIAL INFORMATION OF RAVEN INDUSTRIES INC. THIS DRAWING AND THE INFORMATION HEREON ARE RAVEN INDUSTRIES INC. PROPERTY AND MAY BE USED BY OTHERS ONLY AS AUTHORIZED IN WRITING BY RAVEN INDUSTRIES INC. - ALL RIGHTS RESERVED UNDER THE COPYRIGHT LAWS.			

REVISIONS					
LTR	ECO	DESCRIPTION	DATE	APPROVED	ZONE
A		INITIAL_RELEASE	4/14/2016	RWW	



NOTES:  
XXXXX

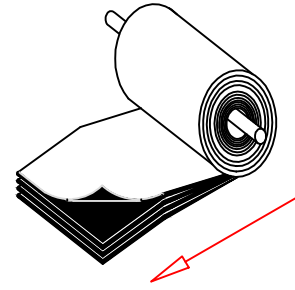



THESE INSTRUCTIONS ARE FOR UNROLLING FROM THE BOTTOM OF THE ROLL

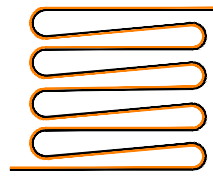

PIECE 4

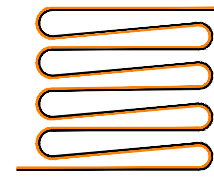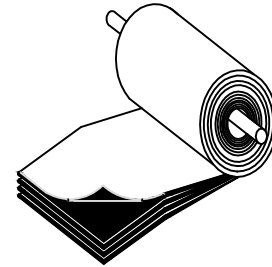

PIECE 5

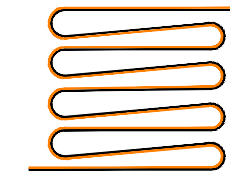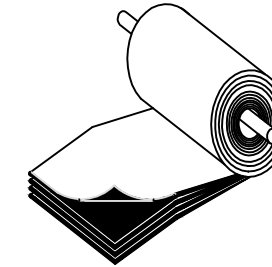


PIECE 6

← UNFOLD

UNFOLD →


UNFOLD →

CONTINUED FROM PAGE 1

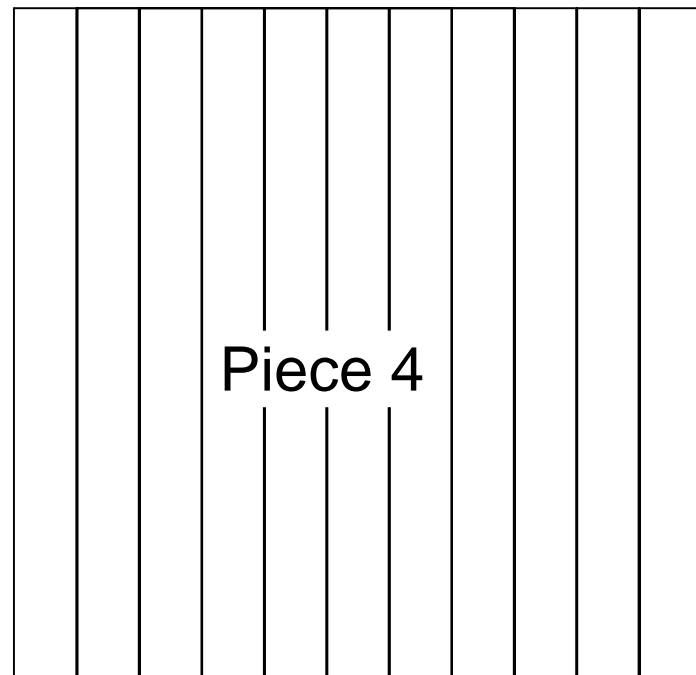

Piece 4

PULL PIECE 4 FROM ROLL

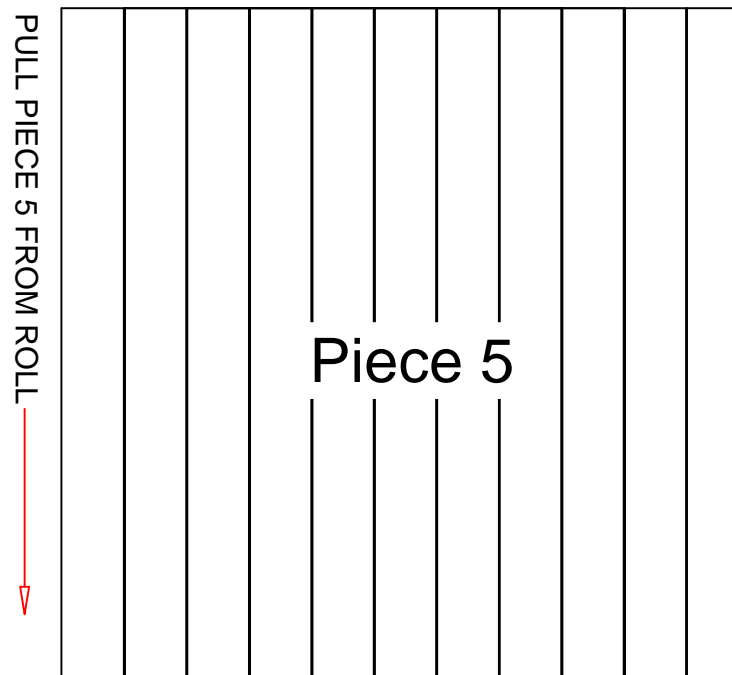

Piece 5

PULL PIECE 5 FROM ROLL



Piece 6

PULL PIECE 6 FROM ROLL

FINISHING END OF BUNKER

DEPLOYMENT INSTRUCTIONS, (CONTINUED;)

8. UNROLL PIECE 4
  9. SEW PIECE 4 TO PIECE 3 AS SHOWN ON THE SEWING INSTRUCTIONS, (PAGE 3 AND 4)
  10. UNFOLD PIECE 4
  11. UNROLL PIECE 5
  12. SEW PIECE 5 TO PIECE 4 AS SHOWN ON THE SEWING INSTRUCTIONS, (PAGE 3 AND 4)
  13. UNROLL PIECE 6
  14. UNFOLD PIECE 6 TO THE FINISHING END OF THE BUNKER
- FOR FURTHER INSTRUCTIONS VISIT [ravenefd.com/installation](http://ravenefd.com/installation)

		COVER TYPE			
		OVAL 6 PIECE Accordion Fold No Options Page 2 of 4			
RAVEN ENGINEERED FILMS PO BOX 5107 SIOUX FALLS, SD 57117-5107 +1 (800) 635-3456		SIZE	SALES ORDER	DRAWING NUMBER	REV
DRAWN: RWW DATE: 1/18/2016		B	'	O6NOAS-2	A
DO NOT SCALE DRAWING		PROPRIETARY AND CONFIDENTIAL INFORMATION OF RAVEN INDUSTRIES INC. THIS DRAWING AND THE INFORMATION HEREON ARE RAVEN INDUSTRIES INC. PROPERTY AND MAY BE USED BY OTHERS ONLY AS AUTHORIZED IN WRITING BY RAVEN INDUSTRIES INC. - ALL RIGHTS RESERVED UNDER THE COPYRIGHT LAWS.			

8

7

6

5

4

3

2

1

REVISIONS					
LTR	ECO	DESCRIPTION	DATE	APPROVED	ZONE
A		INITIAL_RELEASE	4/14/2016	RWW	

NOTES:  
XXXXX

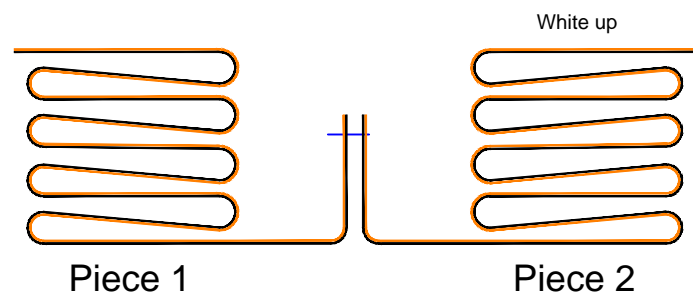


FIGURE 1

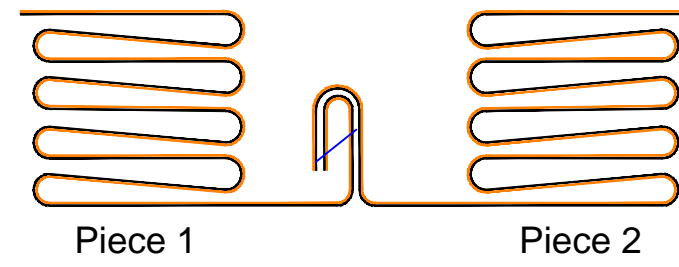


FIGURE 2

SEWING INSTRUCTIONS

1. ONCE FIRST AND SECOND PIECE ARE UNROLLED, BRING THE BOTTOM OF BOTH PIECES TOGETHER BLACK TO BLACK, (FIGURE1)
2. SEW ACROSS THE ENTIRE SEAM AS SHOWN IN THE GENERAL SEWING INSTRUCTIONS, (PAGE 4)
3. FOLD THE SEAM OVER AND SEW THE ENTIRE SEAM AS SHOWN IN THE GENERAL INSTRUCTIONS, (FIGURE 2)
4. REPEAT THIS PROCESS FOR ALL REMAINING SEAMS

FOR FURTHER INSTRUCTIONS VISIT [ravenefd.com/installation](http://ravenefd.com/installation)

	COVER TYPE			REV
	OVAL 6 PIECE Accordion Folded No Options			
RAVEN ENGINEERED FILMS PO BOX 5107 SIOUX FALLS, SD 57117-5107 +1 (800) 635-3456		SALES ORDER	DRAWING NUMBER	B
DRAWN	RWW	4/14/2016	O6NOAS-3	
DO NOT SCALE DRAWING		PROPRIETARY AND CONFIDENTIAL INFORMATION OF RAVEN INDUSTRIES INC. THIS DRAWING AND THE INFORMATION HEREON ARE RAVEN INDUSTRIES INC. PROPERTY AND MAY BE USED BY OTHERS ONLY AS AUTHORIZED IN WRITING BY RAVEN INDUSTRIES INC. - ALL RIGHTS RESERVED UNDER THE COPYRIGHT LAWS.		

8

7

6


5

4

3


2

1

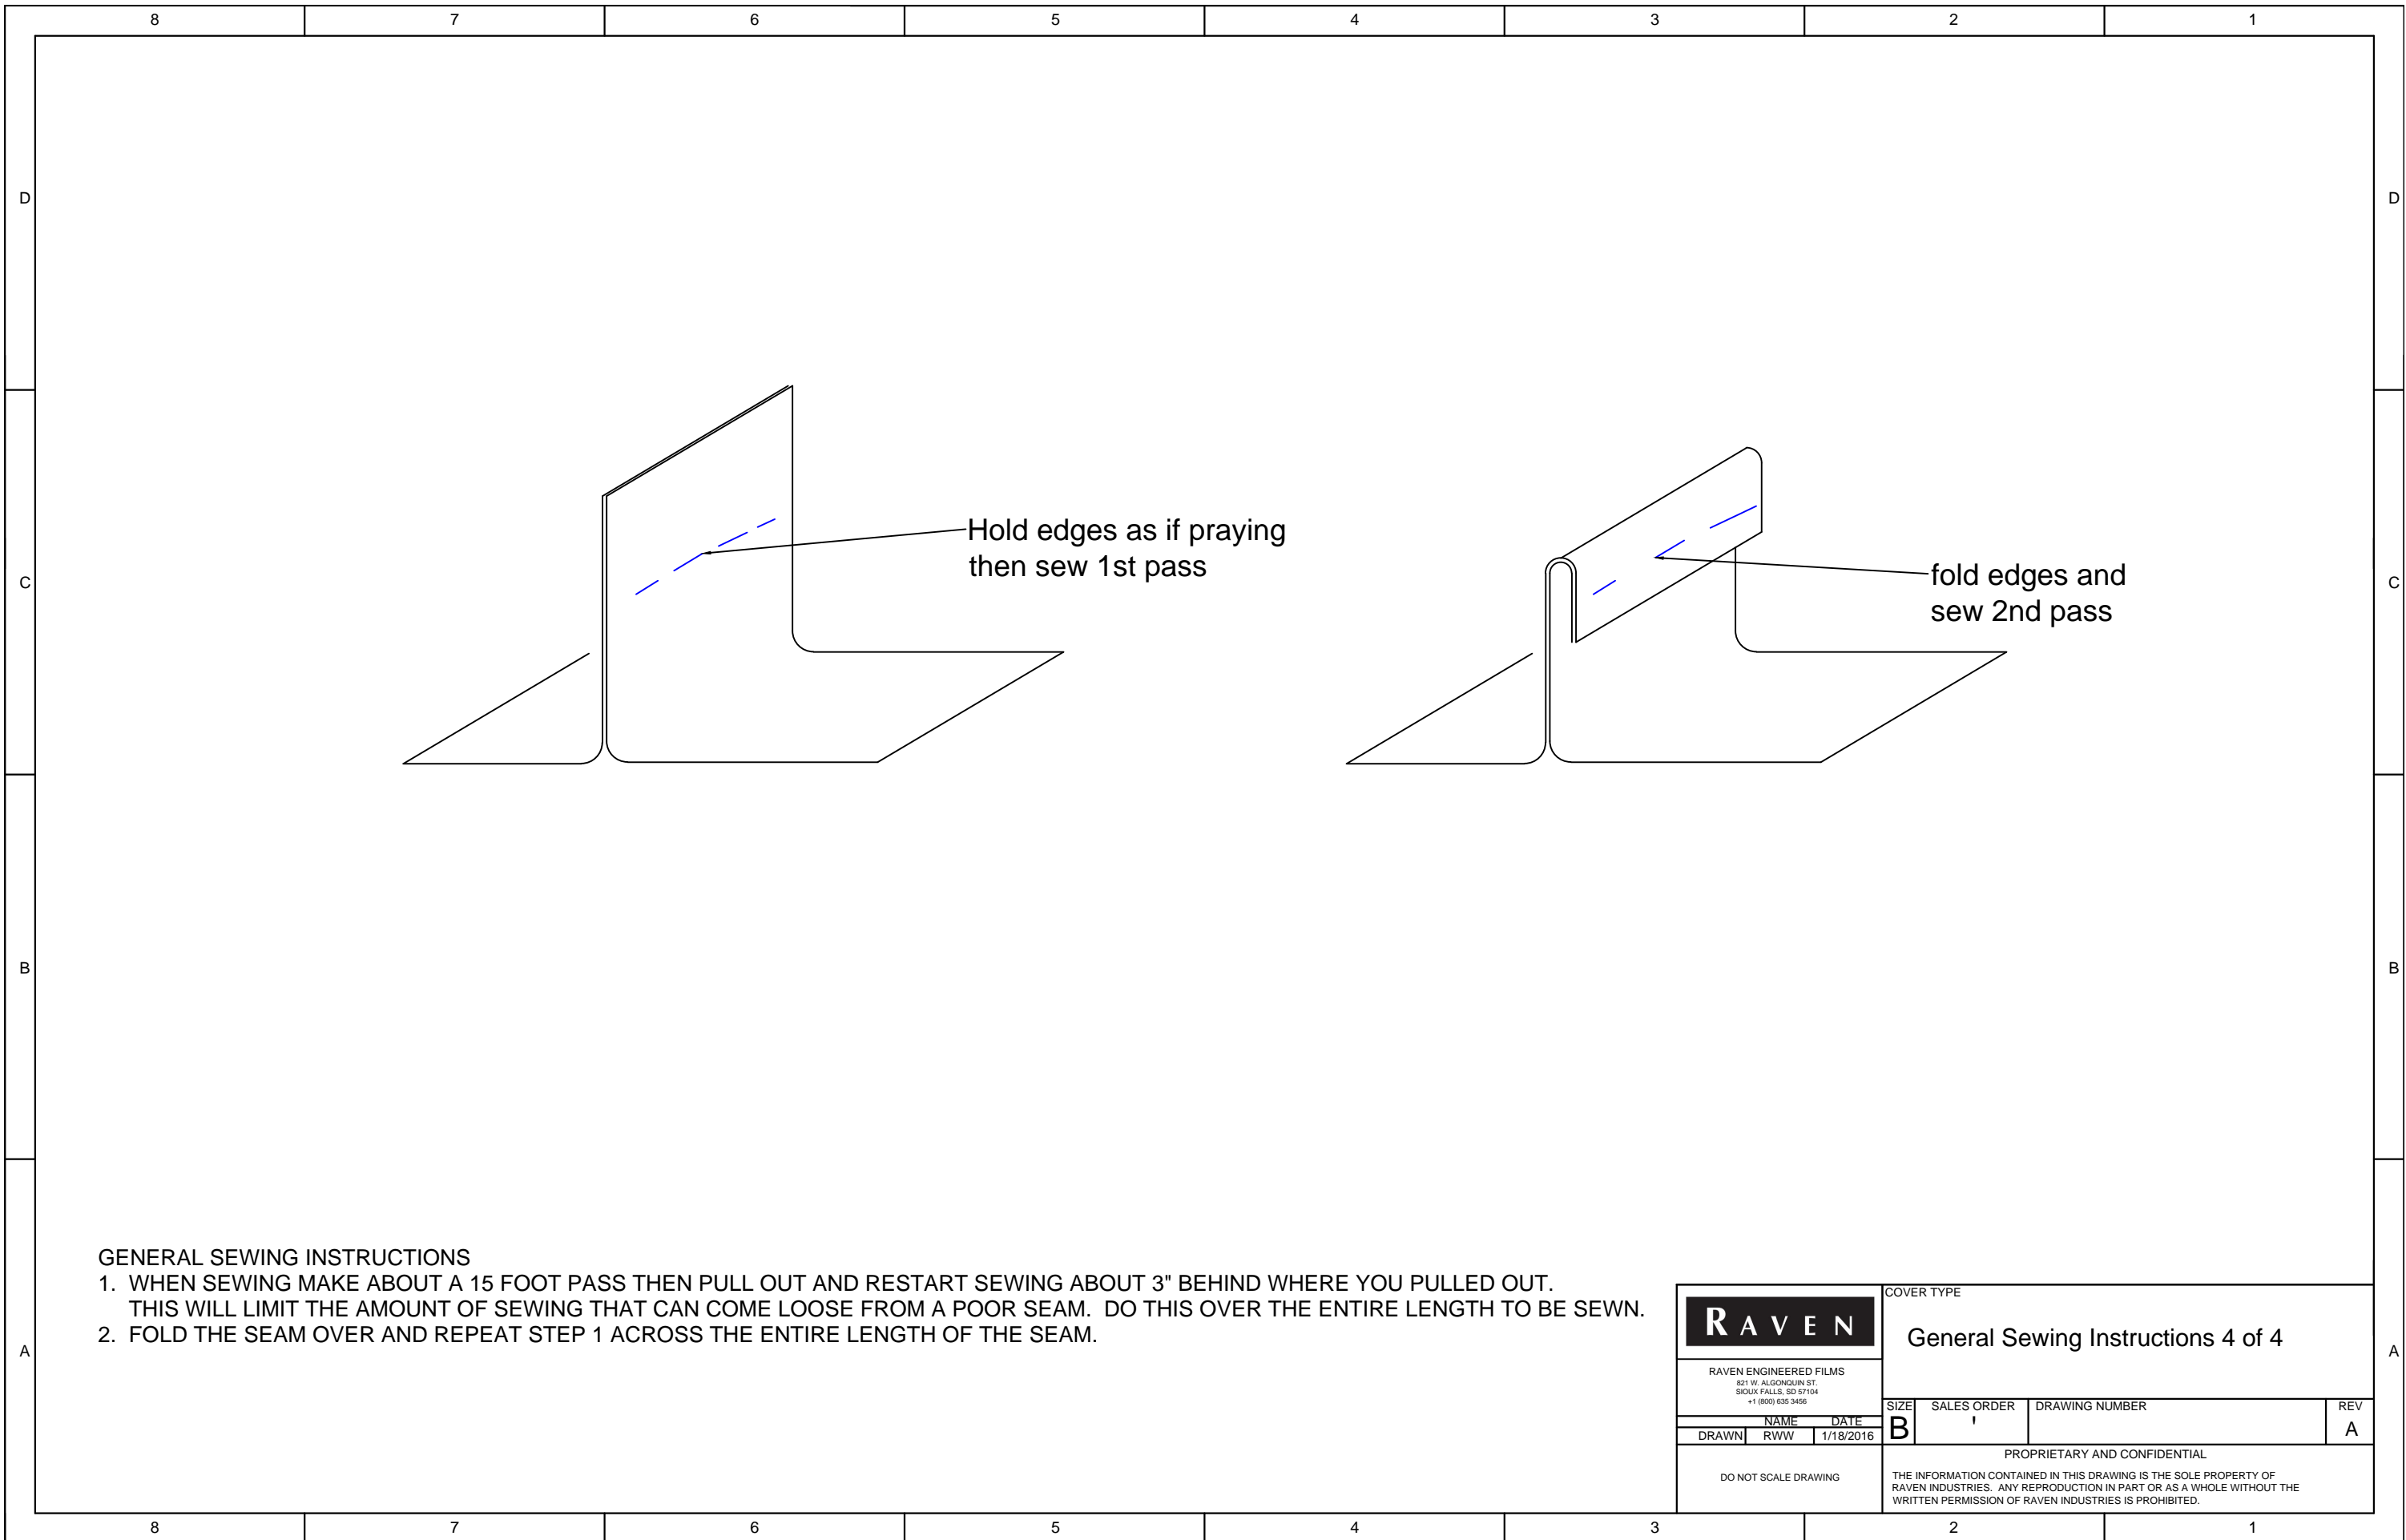

**GENERAL SEWING INSTRUCTIONS**

1. WHEN SEWING MAKE ABOUT A 15 FOOT PASS THEN PULL OUT AND RESTART SEWING ABOUT 3" BEHIND WHERE YOU PULLED OUT. THIS WILL LIMIT THE AMOUNT OF SEWING THAT CAN COME LOOSE FROM A POOR SEAM. DO THIS OVER THE ENTIRE LENGTH TO BE SEWN.
2. FOLD THE SEAM OVER AND REPEAT STEP 1 ACROSS THE ENTIRE LENGTH OF THE SEAM.

		COVER TYPE		
		General Sewing Instructions 4 of 4		
<small>RAVEN ENGINEERED FILMS 821 W. ALGONQUIN ST. SIOUX FALLS, SD 57104 +1 (800) 635-3456</small>		SIZE	SALES ORDER	DRAWING NUMBER
<small>DRAWN</small> RWW	<small>NAME</small> RWW	<small>DATE</small> 1/18/2016	<b>B</b>	<small>REV</small> A
DO NOT SCALE DRAWING		<small>PROPRIETARY AND CONFIDENTIAL</small> THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RAVEN INDUSTRIES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RAVEN INDUSTRIES IS PROHIBITED.		