

VAPORBOOT


p/n: VBOOT

package contents: 25-each VaporBoot 18"x18"
& 1 Roll VaporBoot Tape 2"x16.4"

INSTALLATION INSTRUCTIONS

1
STEP

Trace or measure the pipe size onto VaporBoot material. Cut a hole approximately 1/2" smaller than outside diameter of pipe. Make several 1/4" long cuts from inside of hole in four to eight places depending upon size of pipe. This will allow pipe to fit tightly in the hole and VaporBoot to stretch around the pipe.

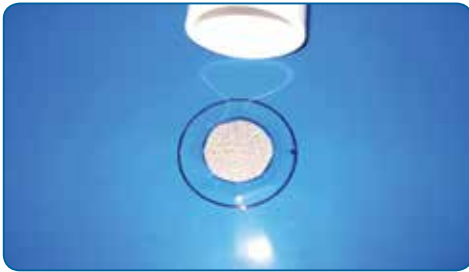


2
STEP

Force VaporBoot over pipe leaving the tightly stretched cut area taut around bottom of pipe with approximately a 1/2" of the VaporBoot material running vertically up the pipe. (No more than a 1/2" of stretched material is recommended to allow tape to adhere directly to pipe.)



3
STEP

Take VaporBoot tape (supplied in VaporBoot System package) and cut to length by measuring around pipe allowing approximately 1" extra for overlap sealing. Fold VaporBoot tape in half lengthwise forming a crease.

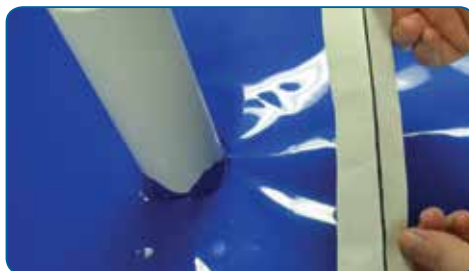

4
STEP

Peel off only one of the two paper release liners and apply tacky side of folded tape to the base of pipe penetration, keeping tape folded in lengthwise position. Once tape has been wrapped completely around pipe, carefully overlap ends at least 1/2" to 1" by tucking end into starting position to make a continuous seal.




5
STEP

Leaving VaporBoot tape in folded position, remove entire outside release liner. Place fingers on inside of folded tape and slowly start working tape outward avoiding any folds or wrinkles in tape. Once VaporBoot tape is completely applied, press around entire section to verify seal.



6
STEP

Finish VaporBoot installation by taping exterior edge of the boot down onto VaporBlock® vapor retarder with Raven VaporSeal™ seaming tape (sold separately) or an approved equal.

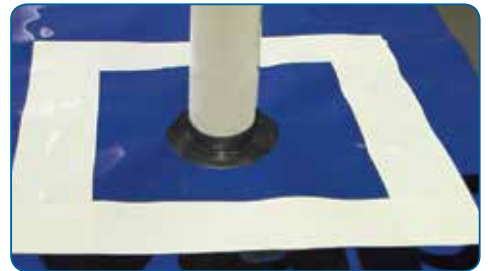

Note: To the best of our knowledge, unless otherwise stated, these are typical property values and are intended as guides only, not as specification limits. Chemical resistance, odor transmission, longevity as well as other performance criteria is not implied or given and actual testing must be performed for applicability in specific applications and/or conditions. RAVEN INDUSTRIES MAKES NO WARRANTIES AS TO THE FITNESS FOR A SPECIFIC USE OR MERCHANTABILITY OF PRODUCTS REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations and disclaims all liability for resulting loss or damage. Limited Warranty available at www.RavenEFD.com

RAVEN

ENGINEERED FILMS DIVISION

P.O. Box 5107 Sioux Falls, SD 57117-5107
Ph: +1 (605) 335-0174 • TF: +1 (800) 635-3456

efdsales@ravenind.com
www.ravenefd.com

101515 EFD 1148