
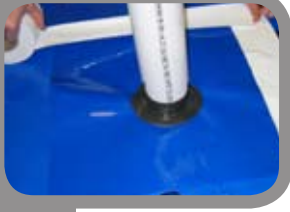


VAPORBOOT INSTALLATION INSTRUCTIONS

**Package Contents: 25 Each VaporBoots 18" x 18"
2 Rolls VaporBoot Tape 2" x 10'**

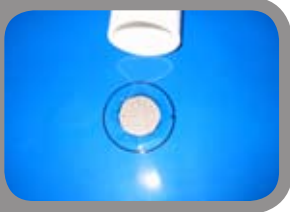

1. Trace or measure the pipe size onto the VaporBoot material. Cut a hole approximately 1/2" smaller than the outside diameter of the pipe. Make several cuts from the inside of hole in four to eight places depending upon the size of the pipe 1/4" long. This will allow the pipe to fit tightly in the hole and the VaporBoot to stretch around the pipe.
2. Force VaporBoot over the pipe leaving the tightly stretched cut area taunt around the bottom of the pipe with approximately a 1/2" of the VaporBoot material running vertically up the pipe. (No more than a 1/2" of stretched VaporBoot material is recommended to allow the tape to adhere directly to the pipe.)
3. Take the VaporBoot tape (supplied in VaporBoot System package) and cut to length by measuring around the pipe allowing approximately 1" extra for overlap sealing. Fold the tape in half lengthwise forming a crease.
4. Peel off only one of the two paper release liners and apply the tacky side of the folded tape to the base of the pipe penetration keeping the tape folded in the lengthwise position. Once the tape has been wrapped completely around the pipe carefully overlap the ends at least 1/2" to 1" by tucking the end into the starting position to make a continuous seal (the very end of the outside release liner will need to be peeled back about 1 1/2" to make this overlap).
5. Leaving the tape in the folded position remove the entire outside release liner. Place fingers on the inside of the folded tape and slowly start working the tape outward avoiding any folds or wrinkles in the tape. Once the VaporBoot tape is completely applied press around entire section to verify the seal.
6. Finish VaporBoot installation by taping the exterior edge of the boot down onto the VaporBlock vapor retarder with Raven VaporBond seaming tape (sold separately) or an approved equal.

**RAVEN
INDUSTRIES**

RAVEN INDUSTRIES, INC. / Engineered Films Division
P.O. Box 5107 • Sioux Falls, SD 57117-5107
Ph: (605) 335-0174 • Fx: (605) 331-0333
Toll Free: 800-635-3456



ISO 9001:2000
CERTIFIED MANAGEMENT SYSTEM

www.vaporblock.com 8/08 EFD 1148