

GRAIN COVER SYSTEMS

GrainMax™ Protector™

ROUND UNFOLD GUIDE


SINGLE PIECE COVER EXAMPLE

(Read All Notes Before Starting Cover Installation)

Note: Before unrolling, verify white side of cover will face upward to avoid unrolling backwards and repositioning cover.



1 STEP

- ◆ Hang roll from pipe and chains for dispensing.
- ◆ Tie a rope noose around the first 10 feet of cover and fold back on itself. Rope goes up and over the center of the pile to a pulling vehicle (a ventilation tube or tire on top ridge keeps rope from sinking into the grain).
- ◆ Dispensed roll across width of the pile with an equal distance of overhang on both sides. Position an individual near the peak of the pile to keep the cover from sliding down the slope.

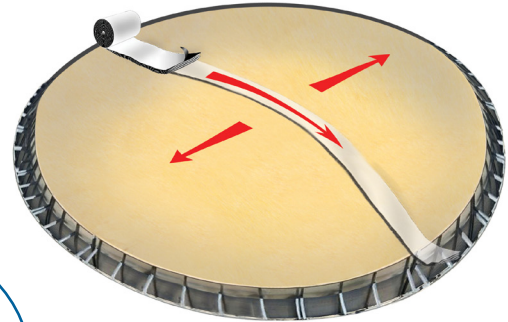


2 STEP

- ◆ Pull out folds white side up from center of pile to outer edge of bunker and overlap bunker edge by approximately two feet.
- ◆ Flop over remaining accordion folds and pull out the opposite direction covering the entire pile.

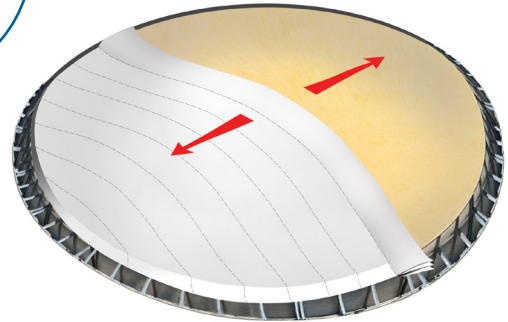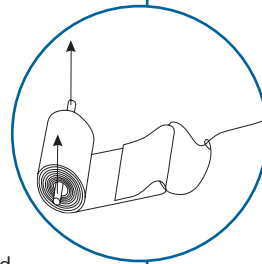

Final Layout

- ◆ Trim cover to about a two foot over hang around the sides of the bunker. Wrap a 2" X 4" in the edge of the cover as a batten strip and screw or nail it to the bunker wall.

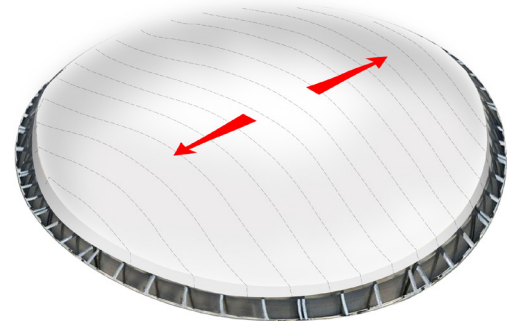

CONSIDERATIONS: Check weather conditions prior to starting your installation, do not try to deploy covers in windy conditions. During and after deployment, some type of ballast must be used to prevent wind from taking control of the cover material, aeration fans may also be utilized. Typically, sandbags are used for ground piles without aeration and should be placed as required to prevent damage to the cover during installation.

Depending on the current wind conditions, the crew should be able to take advantage of a slight breeze by pumping a layer of air under the cover to help float the material while deploying. If at any time the air underneath becomes too excessive, the deployment crew should pull the cover closer to ground level to help push out some of the air. If a large wind gust comes up during deployment, the crew should hold the material down to the ground temporarily until the wind gust passes.

Note: To the best of our knowledge, these are typical installation procedures and are intended as guidelines only. RAVEN INDUSTRIES MAKES NO WARRANTIES AS TO THE FITNESS FOR A SPECIFIC USE OR MERCHANTABILITY OF PRODUCTS OR GUIDELINES REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations and we disclaim all liability for resulting loss or damage. Limited Warranty available at www.RavenEFD.com

RAVEN

ENGINEERED FILMS DIVISION
P.O. Box 5107, Sioux Falls, SD 57117-5107
Ph: (605) 335-0174 • Fx: (605) 331-0333

Toll Free: 800-635-3456
Email: efdsales@ravenind.com
www.ravenefd.com

091515 EFD 1449